



Mean Green Machine Accessory Vise

This accessory vise has been factory set to provide pre-alignment with your Mean Green Machine. In the event that additional adjustments are required (for accessory vises) follow the steps below.

Step 1 - Follow the instructions that came with your machine for “Vise Removal” and remove the vise assembly presently in your machine then install the new vise.

Step 2 - Pull the vise outward until it stops against the retractable Stop Pin Actuator.

Step 3 - Gently push the Paddle Handle downward towards the base of the machine. If you do not detect any resistance or excessive movement of the vise you may proceed to the “Cutting A Key” section of your instructions. If you do detect resistance and limited travel or if the vise noticeably moves when the Paddle Handle is lowered, the following one-time adjustment should be made.

Step 4 – If necessary, this adjustment will be made only once, during initial installation. Identify the adjustment screw and a locking screw located in the rear of the vise. Remove the locking screw. If you found that the vise was moving into the machine as the handle was lowered, turn the adjustment screw clockwise $\frac{1}{2}$ turn and repeat steps 2 & 3 above. If you detected resistance or the travel was limited then turn the adjustment screw counter clockwise $\frac{1}{2}$ turn and repeat steps 2 & 3. Once the adjustments have been completed, reinstall the locking screw and snug it firmly against the adjustment screw.

